



P516-065





B60 Thick Door Kit Instructions

B60 Instrucciones para el Juego de puerta gruesa

Mode d'emploi de l'ensemble de porte épaisse B60


1 Determine Door Thickness

Determine el grosor de la puerta
Déterminez l'épaisseur de la porte

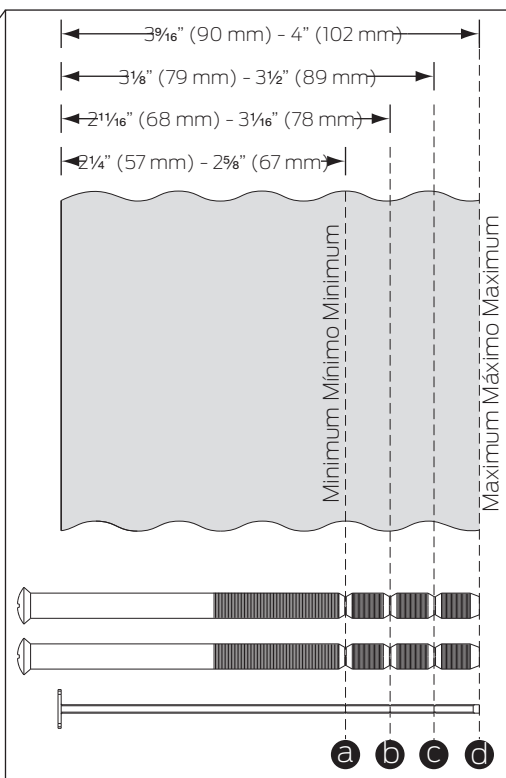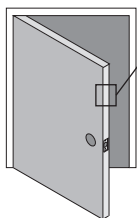


2 Cut Driver Bar and 2 Mounting Screws

Corte la Barra de impulso y 2 Tornillos de montaje
Coupez la barre de prise et deux vis de montage

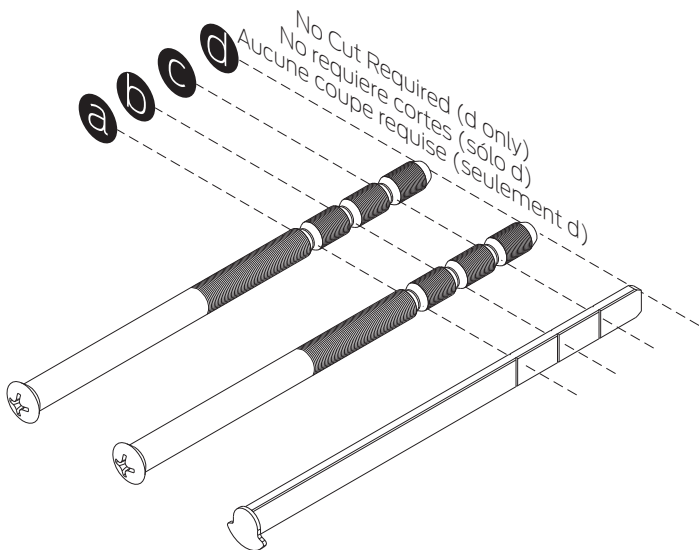


3


Remove Driver Bar From Cylinder
Retire la Barra de impulso del Cilindro
Retirez la barre de prise du cylindre

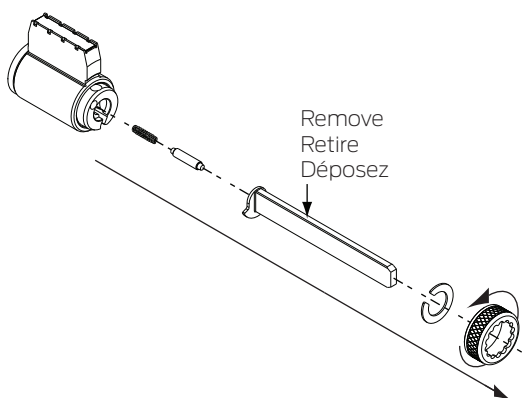**4**

Insert New Driver Bar and Reassemble Cylinder
Inserte la nueva Barra de impulso y vuelva a armar el Cilindro
Insérez la nouvelle barre de prise et réassemblez le cylindre

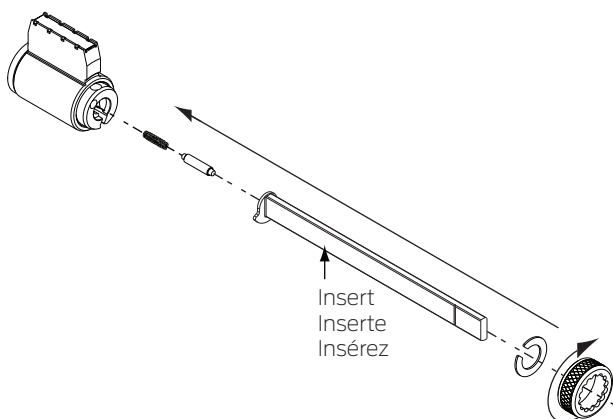**5**

Install Lock Using Cut Mounting Screws
Instale la cerradura con los tornillos de montaje cortos
Installez la serrure en utilisant les vis de montage coupées

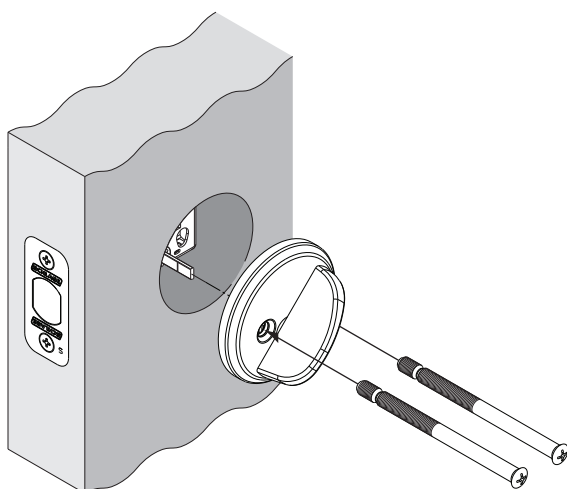**ALLEGION**

© Allegion 2014
1-877-671-7011

Printed in U.S.A.

P516-065 Rev. 03/14-b